

BBQ Parts Manual


Parts List with Exploded View **OUTDOOR BBQ-2 GRILLS** **WOLF®**

Chassis Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	786232	Hood, Top 24"	39	720511	Burner, Pilot LP
	786233	Hood, Top 36"		720513	Burner, Pilot Nat. Gas
	786234	Hood, Top 48"	40	801050	Screw, 8-32x1/2
2	730549	Screw, Shoulder	41	720638	Electrode, Spark 48"
3	722573	Bushing, Flanged	42	786227	Hood, Rear Top 24"
4	722778	Ring, Retainer		786228	Hood, Rear Top 36"
5	801054	Washer, 5/16 Flat		786229	Hood, Rear Top 48"
6	801055	Nut, 5/16-18 Hex	43	766738	Panel, Rear Open Brnr
7	719987	Plug, Button	44	786160	Panel, 24" Rear Grill
8	730101	Screw, 1/4-20 x 1		786161	Panel, 36" Rear Grill
9	730320	Washer, 1/4 Lock		786162	Panel, 48" Rear Grill
10	730334	Washer, 9/32 x 1	45	786226	Hood, Rear RH
11	722639	Washer, Hood Handle	46	720536	Spacer, Hood Guide
12	722625	Handle, Hood 24"	47	730031	Screw, #8 8/32xTr
	722626	Handle, Hood 36"	48	786279	Support, Rod RH
	722627	Handle, Hood 48"	49	766723	Frame, Open Burner
13	801099	Screw, #10-16 x 1/2		766737	Spacer, Open Burner
14	801123	Grate, Filler		801317	Screw, 1/4-20x1/2"
15	722579	Grate, Broiler Large		730320	Washer, 1/4 Lock
	722580	Grate, Broiler Small	50	801211	Screw, 8-32 Acorn S/S
16	800492	Burner, BBQ Tube	51	786225	Hood, Rear LH
17	806103	Radiant	52	766606	Chassis, Grill 24"
18	766733	Frame, Step-up		766607	Chassis, Grill 36"
19	714690	Grate, Side Burner		766608	Chassis, Grill 48"
20	719332	Handle 4"x13/16"	53	730553	Nut, 8-32 Acorn S/S
21	766739	Cover, Open Burner	54	714521	Strap, Spark Ground
22	801364	Screw, 10-24x1/2"	55	806097	Bracket, Sparker
23	720552	Counterbalance, Assy.	56	806123	Burner Box Assy., BBQ24
24	720544	Rod, Rotisserie 24"		806113	Burner Box Assy., BBQ36
	720545	Rod, Rotisserie 36"		806104	Burner Box Assy., BBQ48
	720546	Rod, Rotisserie 48"	57	801491	Grease Can, 24"
25	720548	Fork, Rotisserie Assy.		801492	Grease Can, 36"
26	730247	Screw, 1/4-20x3/4 Th		801493	Grease Can, 48"
27	720617	Handle, Rotisserie	58	766729	Drip Pan, Open Burner
28	766692	Shield, Pilot IR Burner	59	801670	Drip Pan, 24"
29	786211	Panel, Splash 24"		801671	Drip Pan, 36"
	786212	Panel, Splash 36"		801672	Drip Pan, 48"
	786213	Panel, Splash 48"	60	730031	Screw, #8 8/32xTr
30	800800	Orifice, #55 Nat Small	61	809802	Motor Support Assy
	800048	Orifice, #50 Nat Large	62	713777	Bracket, Bar LH
	800803	Orifice, #64 LP Large		713778	Bracket, Bar RH
	800804	Orifice, #65 LP Small	63	722773	Bumper, Hood
31	800258	Elbow, 3/8" x 3/8" MNPT7/16" - 27	64	809798	Motor, Rotisserie (See S/N Break)
32	715554	Burner, Infrared Small		810203	Rotisserie Package-24 (See S/N Break)
	715555	Burner, Infrared Large		810204	Rotisserie Package-36 (See S/N Break)
33	786180	Cover, IR Burner 24"		810205	Rotisserie Package-48 (See S/N Break)
	786181	Cover, IR Burner 36"	65	722224	Tubing, Flex 3/8x30
	786182	Cover, IR Burner 48"		722225	Tubing, Flex 3/8x36
34	722565	Pull, IR Cover		722462	Tubing, Flex 3/8x42
35	730031	Screw, #8 8/32xTr	66	807474	Screw, 10-24x1-1/2
36	800914	Nut, 3/16 Compression	67	811366	Valve, Safety w/Fitting
37	720889	Ferrule, 3/16	68	766624	Bracket, Safety Valve
38	801183	Orifice, Pilot Burner,Nat.	69	801213	Screw, 1/4-20x1.5
	801184	Orifice, Pilot Burner,LP	70	720556	Bar, Belly 1"x24-1/2
			71	722223	Tubing, Flex 3/8x24

WOLF® OUTDOOR BBQ-2 GRILLS Parts List with Exploded View

Chassis Exploded View

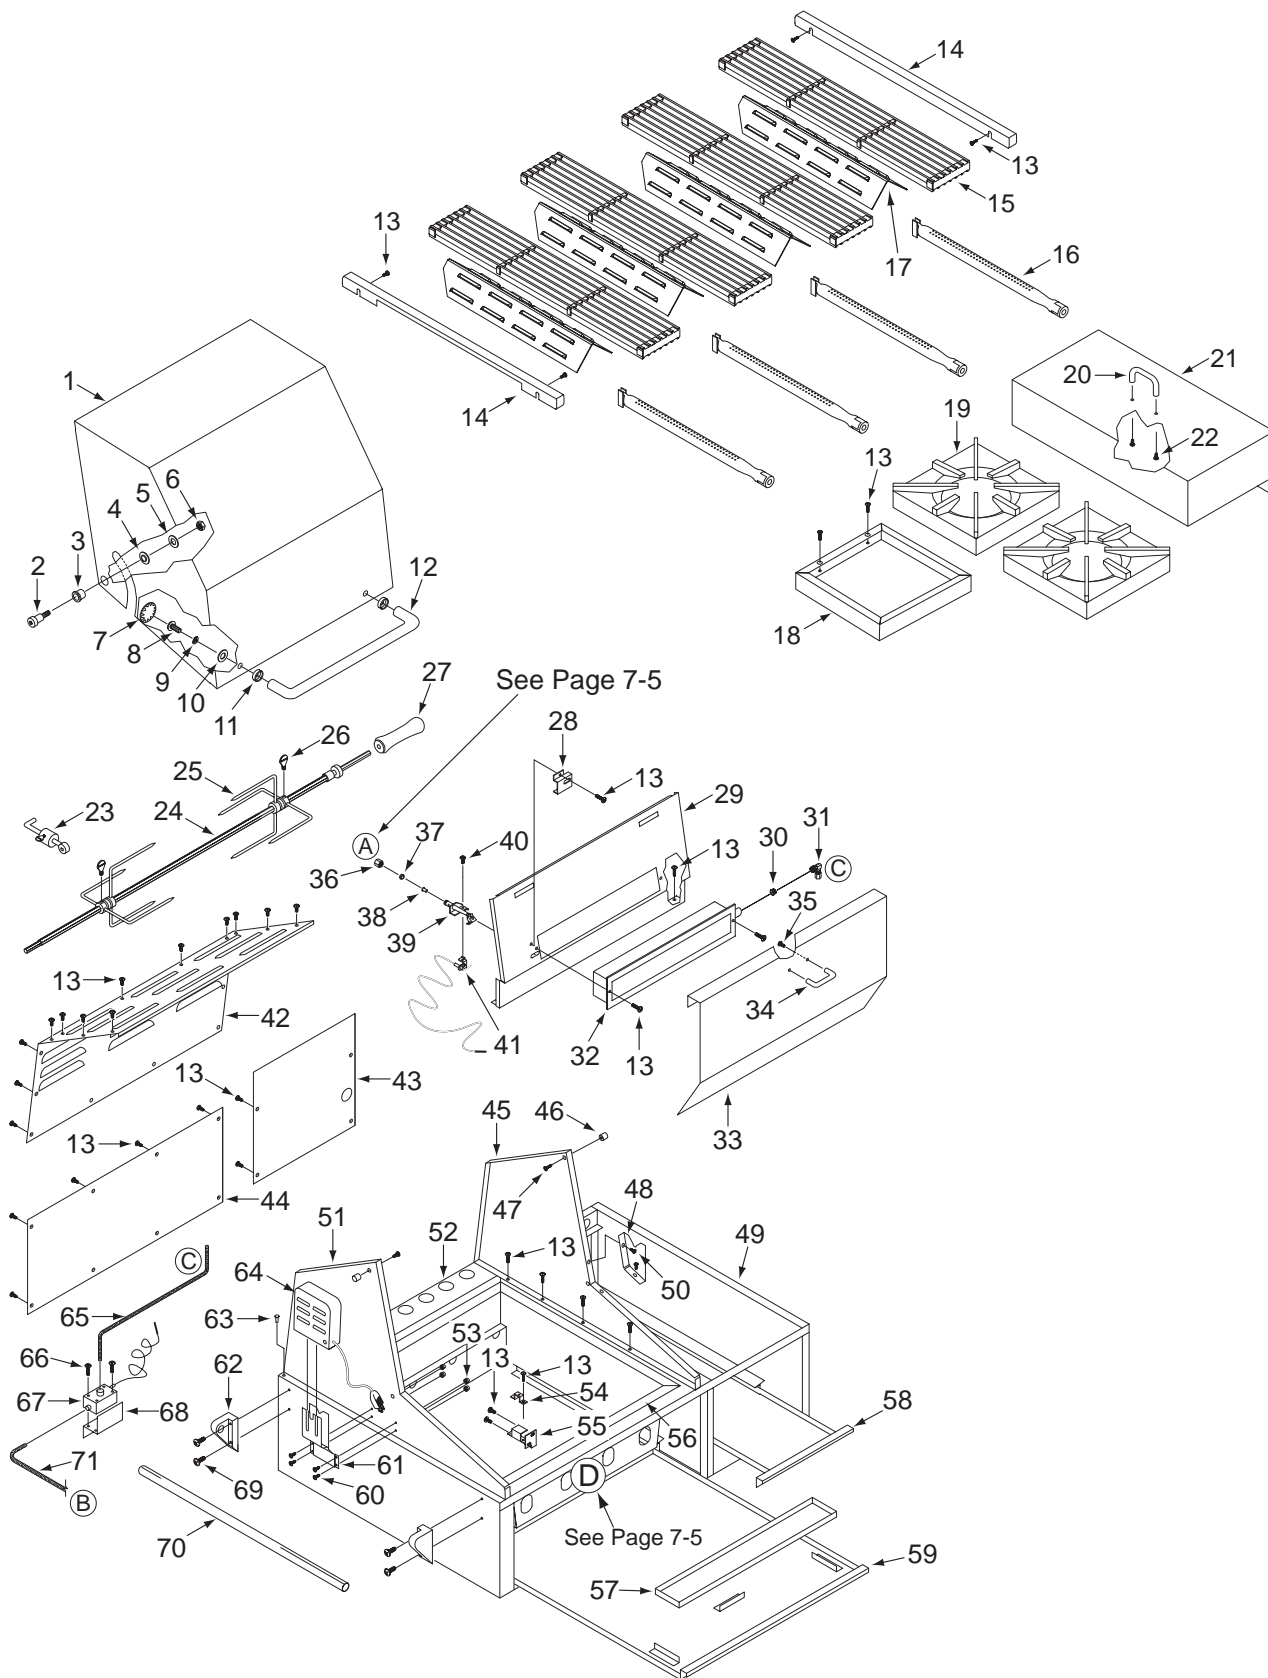

Parts List with Exploded View **OUTDOOR BBQ-2 GRILLS** **WOLF®**


Manifold and Front Panel Parts List

Ref #	Part #	Description
		34 810350 Panel, Front 242
		810352 Panel, Front 36
		810354 Panel, Front 362
		810356 Panel, Front 48
1	801099	Screw, #10-16 x 1/2
2	714521	Strap, Spark Ground
3	766736	Bracket, Electrode
4	714540	Burner, Head 6 slot
5	763684	Bracket, Pilot Tube
6	786186	Bracket, Side Brnr Spt
7	714542	Venturi, Short
8	714697	Venturi, Long Rear
9	719054	Elbow, 3/4x1/2
10	711302	Nipple, 1/2x5"
11	719447	Coupling, 3/8 Flex1/2
12	719059	Elbow, 3/4 Blk St
13	800491	Nipple, 3/4x3"
14	719004	Coupling, 3/4" Blk
15	801358	Regulator, 1/2" Convertible
16	765611	Manifold, 36
	765612	Manifold, 242
	765613	Manifold, 362
	765614	Manifold, 48
17	800805	Orifice, #49 Nat Side
	800807	Orifice, #56 LP Side
18	800806	Orifice, #53 Nat Grill
	800808	Orifice, # 63 LP Grill
19	720484	Valve, Burner LP
	720510	Valve, Burner Nat
20	719370	Plug, 1/8 Hex Head
21	800136	Nut, 3/8" Compr
22	800135	Ferrule, 3/8" Sleeve
23	720509	Connector, 3/8x1/8
24	719070	Nipple, 1/8"
25	719043	Tee, 1/8"
26	800702	Tube, Flex 3/16x36
	800703	Tube, Flex 3/16x48
27	800914	Nut, 3/16 Compr
28	720889	Ferrule, 3/16
29	719192	Adapter, 3/8"
30	719193	Valve, Pilot 1/8x3/16
31	806102	Electrode, Spark 20"
32	809634	Heatshield, Igniter - BBQ-2
33	810965	Bull Nose, 36"
	810966	Bull Nose, 48"
34	810350	Panel, Front 242
	810352	Panel, Front 36
	810354	Panel, Front 362
	810356	Panel, Front 48
		35* 806098 Igniter, Electronic, 1 Pt
		806100 Igniter, Electronic, 3 Pt
		806101 Igniter, Electronic, 4 Pt
		36 811172 Logo, Adhesive
		800924 Logo, Clip
		730509 Timmerman Clip
		37 766756 Knob, Control Red
		766773 Knob, Control Black
		800698 Knob, Package Black
		38 800718 Holder, Match w/Lanyard
		39 806129 Baffle, Upper BBQ24
		806119 Baffle, Upper BBQ36
		806110 Baffle, Upper BBQ48
		40 806130 Baffle, Lower BBQ24
		806120 Baffle, Lower BBQ36
		806111 Baffle, Lower BBQ48
		41 806134 AAA Battery
		42 806095 Igniter Button, Black - BBQ-2
		43 730076 Screw, 6-32 X 1/4" - Heatshield

* See section 6-2 for configuration matrix.

WOLF® OUTDOOR BBQ-2 GRILLS Parts List with Exploded View

Manifold and Front Panel Exploded View

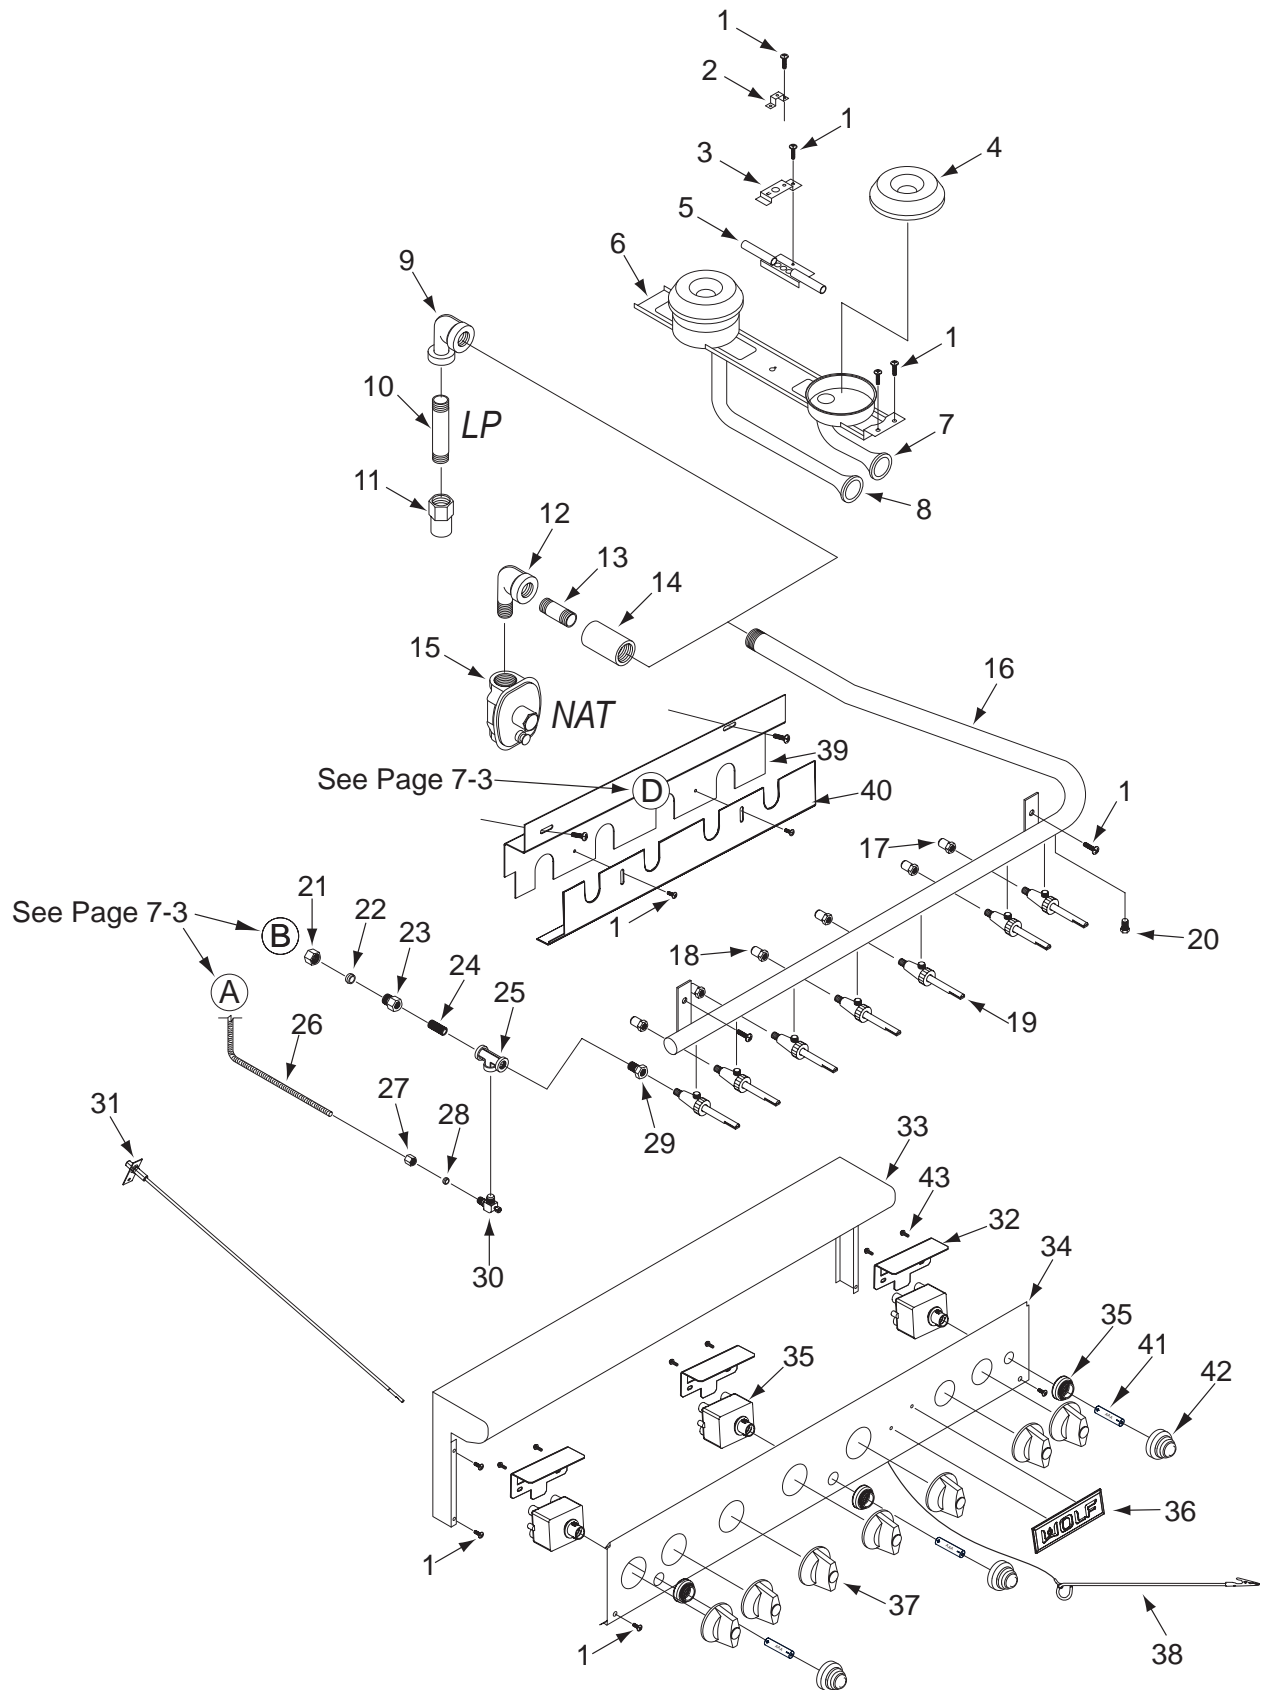

Parts List with Exploded View **OUTDOOR BBQ-2 GRILLS** **WOLF**[®]

Cart Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801099	Screw, #10-16 x 1/2
2	786258	Panel, Rear Cart 36"
	786259	Panel, Rear Cart 48"
3	730320	Washer, 1/4 Lock
4	801317	Screw, 1/4-20x1/2"
5	801197	Shelf, Side Plate
6	801196	Bracket, Shelf Assy
7	801115	Panel, Cart Side RH
8	804519	Brush, with Scraper
9	720662	Brush, Venturi Tube
10	786263	Panel, Bottom without hole 36"
	786261	Panel, Bottom with hole 36"
	786264	Panel, Bottom without hole 48"
	786262	Panel, Bottom with hole 48"
11	801260	Screw, 8-32 x 3/4
12	714739	Tube
13	770026	Catch, Magnetic
14	786185	Holder, Top Catch
15	801364	Screw, 10-24x1/2
16	719332	Handle 4 x13/16"
17	801130	Screw, 8-32 x 1/2"
18	786183	Door, Assy Comm
19	715220	Caster, 5" Non-swivel
20	786269	Bracket, Locking
21	715132	Caster, 5" Swivel w/ brake
22	730334	Washer, 9/32 x 1
23	730103	Screw, 1/4-20x2 Hex
24	786252	Trim, Top Cart 36"
	786253	Trim, Top Cart 48"
25	719874	Rivet, Pop
26	801116	Panel, Cart Side LH 36"
	801117	Panel, Cart Side LH 48"
27	786247	Frame, Cart 36"
	801004	Frame, Cart 48"
28	720558	Tank, Propane 20#
29	802979	Regulator, LPw5'Hs

Not Shown

786256	Shelf, Cart 48"
786265	Cart, Partition 48"
730103	Screw, 1/4-20x2 Hex (Shelf, Cart 48")
803636	Cover, Built-In 36"
803637	Cover, Built-In 48"
803638	Cover, Cart 36"
803639	Cover, Cart 48"
806370	Accessory Kit, NAT
806371	Accessory Kit, LP

WOLF® OUTDOOR BBQ-2 GRILLS Parts List with Exploded View

Cart Exploded View

